FOR CAR USE ONLY/NUR FÜR AUTOMOBIL GEBRAUCH/POUR APPLICATION AUTOMOBILE UNIQUEMENT/PARA USO EN AUTOMÓVILES/SOLO PER L'UTILIZZO IN AUTOMOBILE/ENDAST FÖR BILBRUK/ALLEEN VOOR GEBRUIK IN DE AUTO/ТОЛЬКО ДЛЯ ИСПОЛЬЗОВАНИЯ В АВТОМОБИЛЯХ/DO UŻYCIA TYLKO W SAMOCHODZIE/ΓΙΑ ΧΡΗΣΗ ΜΟΝΟ ΣΕ ΑΥΤΟΚΙΝΗΤΟ/汽車專用/汽车专用

EN DE FR ES IT SE NL RU PL GR CT CS

ALPINE®

Bluetooth INTERFACE

KCE-400BT

- OWNER'S MANUAL
  Please read before using this equipment.
- BEDIENUNGSANLEITUNG
  Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- MODE D'EMPLOI
  Veuillez lire avant d'utiliser cet appareil.
- MANUAL DE OPERACIÓN
  Léalo antes de utilizar este equipo.
- ISTRUZIONI PER L'USO
  Si prega di leggere prima di utilizzare il attrezzatura.
- ANVÄNDARHANDLEDNING
  Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- GEBRUIKERSHANDLEIDING
  Lees deze aanwijzingen aandachtig alvorens dit toestel te gebruiken.
- РУККОВООВОДСТВО ПО ЭКСПЛУАТАЦИИ
  Прочтитетите настоящее руковоководство перед началом использования оборудования.
- INSTRUKCJA OBSŁUGI
  Prosimy zapoznać się z tą instrukcją przed przystąpieniem do użytkowania urządzenia.
- ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ
  Παρακαλούμε διαβάστε το πριν χρησιμοποιήσετε τη συσκευή.
- 用戶手冊
  請在使用本設備之前先閱讀用戶手冊。
- 用户说明书
  使用设备前请阅读本说明书。

Bluetooth®

Parrot
move wireless

ALPINE ELECTRONICS MARKETING, INC.
1-1-8 Nishi Gotanda,
Shinagawa-ku,
Tokyo 141-0031, Japan
Phone 03-5496-8231

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
777 Supertest Road, Toronto,
Ontario M3J 2M9, Canada
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH
Frankfurter Ring 117, 80807 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue de la Belle Etoile, Z.I. Paris Nord II,
B.P. 50016, 95945 Roissy Charles de Gaulle
Cedex, France
Phone 01-48638989

ALPINE ITALIA S.p.A.
Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

ALPINE ELECTRONICS (BENELUX) GmbH
Leuvensesteenweg 510-B6,
1930 Zaventem, Belgium
Phone 02-725-13 15

DAESUNG ELTEC CO., LTD.
Phone 031-711-1731
Web www.dseltec.co.kr

SUZHOU CRESTEC PRINTING CO., LTD.China
596-598 Chang Jiang Road, Suzhou, Jiangsu, P.R.China

Printed in China (Y)
68-14470Z05-A

Contents

Operating Instructions

⚠ WARNING

WARNING **2**
CAUTION **2**

Setup Before Using

About Bluetooth 3
Before Using Hands-Free Function 3
How to connect to a Bluetooth compatible device (Pairing) 3

Bluetooth SETUP

Bluetooth Setup Operation 4
Setting the Bluetooth Device 4
Setting the Search Mode 4
Answering Calls Automatically 4
Deleting a Bluetooth Device from the list 5
Displaying the phone service provider name (CDA-105 Series only) 5
Adjusting the volume for the microphone input 5
Selecting the output speaker 5
Displaying the firmware version 5
Updating the firmware 5

Hands-Free Phone Control

About the Hands-Free Phone 6
Answering a Call 6
Hanging up the Telephone 6
Voice Dial Operation 6
Adjusting the volume when receiving a Call 7
Redial Function 7
Audio Switching Operation (CD Head Unit Only) 7
Call History 7
Redialing a Number in Dialed Calls History 8
Dialing a Number in Received Calls History 8
Dialing a Number in Missed Calls History 8
Dialing a Number In the Phone Book (PHONE BOOK) 8

Bluetooth Audio Function

Bluetooth Audio Operation 8
Recalling the Bluetooth Mode 8
Selecting the desired Song 8
Pausing 8

Accessories **9**

Installation

Velcro fastener Mounting 9
Mounting the Microphone 9

Connections

Connect a Bluetooth compatible unit and an iPhone/iPod to the Bluetooth INTERFACE 10

Specifications **12**

LIMITED WARRANTY ..... **WARRANTY-EN**

- *Setting items, operations, etc., may be modified or removed without notice depending on the connected Alpine Bluetooth compatible unit.*

Operating Instructions

WARNING

⚠ WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, shift lever, brake pedals, etc. can be extremely hazardous.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

⚠ CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

Setup Before Using

About Bluetooth

Bluetooth is a wireless technology allowing communication between a mobile device or personal computer over short distances. This enables a hands-free call or data transmission between Bluetooth compatible devices. Bluetooth transmission is available in the unlicensed 2.4 GHz spectrum if the distance between devices is within 10 meters. For details, refer to the Bluetooth Homepage (http://www.bluetooth.com/).

- *Depending on the Bluetooth version, a Bluetooth compatible device may not be able to communicate with this adapter.*
- *Proper function of this adapter with all Bluetooth compatible devices is not guaranteed. For handling of the BT compatible device, consult your ALPINE dealer or ALPINE website.*
- *Depending on the surroundings, Bluetooth wireless connection may be unstable.*
- *When you place a call, or perform setup operations, be sure to stop your car in a safe place.*
- *For details on the control (selection, enter, cancel) from the connected unit, refer to the Owner's Manual of the respective unit.*
- *Depending on the connected Bluetooth compatible device(s), the function may differ. Also refer to the Owner's Manual of the connected device(s).*

Before Using Hands-Free Function

Before using the hands-free phone/audio function, the following settings need to be made.

1 Be sure to set "INT MUTE" (in the setup function of the connected CD Head Unit or Digital Media Receiver) to OFF.

- *To enable sound pass-through of the Bluetooth compatible device, make sure that INT MUTE is turned OFF (Initial setting on the unit is OFF).*

2 Set "BLUETOOTH IN" or "BT IN" to ADAPTER*. (Refer to the Owner's Manual of the connected units.)

3 Turn the ignition key off (ACC OFF) and on again (ACC ON).

- *Before using a hands-free phone, it must be paired with the adapter. Refer to "Bluetooth SETUP" (pages 4-5).*

* *If "BLUETOOTH IN" or "BT IN" setting is turned OFF at any time, adapter communication is canceled. To resume communication: repeat Steps 1 through 3 above.*

How to connect to a Bluetooth compatible device (Pairing)

For details on the control from a Bluetooth compatible device, refer to the Owner's Manual of the Bluetooth compatible device.

1 Set a Bluetooth connection from a Bluetooth compatible device.

2 The PIN code ("0000") is displayed on the connected unit.

- *The PIN code is fixed as "0000".*

3 Input the PIN code ("0000") in a Bluetooth compatible device.

4 If the connected unit is successfully connected to a Bluetooth compatible device, a paired device name is displayed on the unit, and then the unit returns to normal mode.

- *The registration number 5 is the guest mode. Content that is registered as the guest mode is deleted when you set ignition from ACC to OFF. If all the 5 positions (including guest mode) have been registered, you cannot register the 6th device. To register another device, you need to delete one of the device from position1 to 5 first.*
- *If a Bluetooth compatible device is successfully connected, the next time when the ignition key of the car is turned to on, the unit will automatically connect to the previously connected device. However, the connection may fail. If the auto connection fails, try the connection manually.*
- *Set "Setting the Search Mode" (page 4) to ON to enable the KCE-400BT to recognize a mobile phone. For mobile phone passkey (passcode) input operation, refer to the mobile's Owner's Manual.*

Bluetooth SETUP

Bluetooth Setup Operation

The following steps 1 to 5 are common to the various Bluetooth functions. For details, refer to each individual function.

- *When placing or receiving a call or streaming audio from the Bluetooth device, Bluetooth Setup operation cannot be performed.*
- *Refer to the Owner's Manual of the CD Head Unit or Digital Media Receiver, and set "BLUETOOTH IN" or "BT IN" to ADAPTER, and then perform Bluetooth SETUP operation.*

1 Press and hold SETUP for at least 2 seconds.

2 Turn the Rotary encoder or the Double Action encoder to select the desired setting items and press ENT.

Setting items:
BT IN ↔ ***PAIR DEVICE**[1]*** ↔ ***VISIBLE MODE**[1]*** ↔ ***AUTO ANSWER**[1]*** ↔ ***CLEAR DEVICE**[1]*** ↔ ***SERVICE NAME**[1]/*[2]*** ↔ ***MIC INPUT**[1]*** ↔ ***SPEAKER SELECT**[1]*** ↔ ***FW VERSION**[1]*** ↔ ***FW UPDATE**[1]***

[1] When "BLUETOOTH IN" or "BT IN" is set to ADAPTER, the above items are displayed.
[2] Only for CDA-105 Series.

3 Turn the Rotary encoder or the Double Action encoder to change the settings and press ENT.

4 Press and hold ESC (or SETUP) or ⮌ for at least 2 seconds.
The SETUP mode is canceled.

Setting the Bluetooth Device

Select one of 5 connected Bluetooth compatible devices that you previously registered (the fifth registered by guest mode*).

Setting item: PAIR DEVICE

Turn the Rotary encoder or the Double Action encoder to select a Bluetooth compatible device you want to use (you want to change connection), and then press ENT.

- *If the connection is successfully changed, "CONNECTED" or "CONNECT" is displayed for 2 seconds, and then the display returns to the SETUP screen.*
- *If you input the wrong passcode or communications fail, "FAILED" is displayed.*
- *When a mobile phone is paired with the unit, up to 1,000 telephone numbers will automatically be obtained in the telephone book (PHONE BOOK). Also, when the mobile phone is reconnected, new information on the mobile phone will automatically be updated.*
- *Depending on the connected mobile phone, the telephone book (PHONE BOOK) may not be automatically obtained. If the telephone book cannot be automatically obtained, it can be manually transferred to the adapter by referring to the Owner's Manual of the mobile phone.*
- *If you want to connect another Bluetooth compatible device, after disconnecting the current Bluetooth compatible device, connect the Bluetooth compatible device you want to change to.*
  The PIN code is fixed as "0000".

* *Guest mode:*
Use this mode for a temporary pairing. Registration (in guest mode) is canceled once the ignition key goes from ACC to off.

Setting the Search Mode

You can set whether the KCE-400BT can be recognized or not from a Bluetooth compatible device. Normally set this to ON.

Setting item: VISIBLE MODE

ON: Enable recognition of the KCE-400BT from the Bluetooth compatible device.
OFF: Disable recognition of the KCE-400BT from the Bluetooth compatible device.

- *Depending on the mobile phone, it may be necessary to input a passcode. For inputting the mobile phone's passcode, refer to the mobile phone's Owner's Manual.*

Answering Calls Automatically

When a call is received, you can set whether to answer it automatically or not.

Setting item: AUTO ANSWER

ON: When a call is received, it is answered automatically after about 5 seconds.
OFF: When a call is received, it is not answered automatically. Press ↙ or ↘ to receive the call.

- *If the received call setting on the mobile phone is on, the call will be answered automatically even though this setting is set to OFF.*

Deleting a Bluetooth Device from the list

You can delete the history of a previously paired Bluetooth compatible device.

Setting item: CLEAR DEVICE

1 Turn the Rotary encoder or the Double Action encoder to select the Bluetooth compatible device to be deleted and then press ENT.

2 Turn the Rotary encoder or the Double Action encoder to select CLEAR YES if you want to delete and then press ENT.

- *Selecting CLEAR NO will cancel the setting.*

Displaying the phone service provider name (CDA-105 Series only)

Setting item : SERVICE NAME

The service provider name of the connected Bluetooth compatible device will be displayed. If a Bluetooth compatible device is not connected, "ID UNSENT" will be displayed.

- *Depending on the character type, some phone service provider name may not be displayed.*

Adjusting the volume for the microphone input

You can emphasise or weaken the microphone input volume level.

Setting item: MIC INPUT

Turn the Rotary encoder or the Double Action encoder to select the desired volume level (0~15).

- *This operation can be made for the unit of CDE-101 Series/CDE-102 Series/CDE-W203 Series/CDA-105 Series/iDA-X301 Series/iDA-X303 Series.*
- *The setting can be adjusted only when the Bluetooth compatible device is connected.*
- *The setting cannot be adjusted during a phone call. Adjust the setting before placing a call.*

Selecting the output speaker

You can select the connected speaker in car to output the sound signal of telephone.

Setting item: SPEAKER SELECT

ALL: The sound be output from all of speakers in car.
F-L: The sound only be output from the front left speaker.
F-R: The sound only be output from the front right speaker.
F-LR: The sound be output from the front left and front right speaker.

- *This operation can be made for the unit of CDE-101 Series/CDE-102 Series/CDE-W203 Series/CDA-105 Series/iDA-X301 Series/iDA-X303 Series.*
- *The setting cannot be adjusted during a phone call. Adjust the setting before placing a call.*

Displaying the firmware version

Setting item: FW VERSION

The current firmware version will be displayed.

Updating the firmware

Setting item: FW UPDATE

With this setting, the Bluetooth firmware update function can be activated.

For European users:
Future Bluetooth firmware update (for phone compatibility) at customer end will be available for Alpine products listed at (*1).
For information to update your Bluetooth firmware, please visit your local Alpine web site or choose your country from Alpine Europe top page (http://www.alpine-europe.com). For the products, which are NOT listed at (*1), please contact your local official Alpine dealer or Alpine support for your country.

**1: iXA-W404R, iDA-X305/303/301/301RR, CDE-W203Ri, CDE-105Ri, CDE-102Ri, CDE-101R/RM.*

For American users:
Future Bluetooth firmware update (for phone compatibility) at customer end will be available for Alpine products listed at (*2).
For information to update your Bluetooth firmware, please visit Alpine America home page (http://www.alpine-usa.com).
For the products, which are NOT listed at (*2), please contact your local official Alpine dealer or Alpine support for your country.

**2: iXA-W404, iDA-X305/303, CDE-105, CDE-102.*

For Asian users:
Future Bluetooth firmware update (for phone compatibility) at customer end will be available for Alpine products listed at (*3).
For information to update your Bluetooth firmware, please visit Alpine Asia home page (http://www.alpine-asia.com).
For the products, which are NOT listed at (*3), please contact your local official Alpine dealer or Alpine support for your country.

**3: iXA-W404E, iDA-X305/303, CDE-W203E, CDE-105E, CDE-102E, CDE-101E/EM.*

For Chinese users:
Future Bluetooth firmware update (for phone compatibility) at customer end will be available for Alpine products listed at (*4).
For information to update your Bluetooth firmware, please visit Alpine China home page (http://www.alpine.com.cn).
For the products, which are NOT listed at (*4), please contact your local official Alpine dealer or Alpine support for China.

**4: iXA-W404E, iDA-X305, CDE-105E, CDE-102E, CDE-101E.*

Hands-Free Phone Control

About the Hands-Free Phone

Hands-free calls are possible when using a HSP (Head Set Profile) and HFP (Hands-Free Profile) compatible mobile phone with a ALPINE Bluetooth compatible CD Head Unit or Digital Media Receiver.

- *Avoid performing a hands-free call in heavy traffic or on narrow or winding streets.*
- *Close the windows while calling to reduce background noise.*
- *If both calling parties are using hands-free devices, or the call is made in a noisy location, difficulty hearing the other person's voice is normal.*
- *Depending on telephone line conditions or certain mobile devices used, voices may sound unnatural.*
- *When using a microphone, speak as directly as you can into the microphone to pick up the best sound quality.*
- *Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality.*
  All features, functionality, and other product specifications, as well as the information contained in the Owner's Manual are based upon the latest available information and are believed to be accurate at the time of printing. Alpine reserves the right to change or modify any information or specifications without notice or obligation.

Answering a Call

Incoming calls are announced by the received call ring tone and a displayed message (Caller name/PHONE No.).

Digital Media Receiver:

Press ↘.

CD Head Unit:

Press ↙.

- *When "Answering Calls Automatically" (page 4) is set to ON, you can receive a call automatically.*
- *While calling, the source sound on the unit is muted.*

Hanging up the Telephone

Digital Media Receiver:

Press ↘.

CD Head Unit:

Press ↙.

Voice Dial Operation

You can call the telephone by performing voice operation.

1 **Press and hold ↘ or ↙ for at least 2 seconds.**
The speak mode is activated, and "SPEAK" is displayed.

2 **Say the telephone number, name you want to call into the microphone.**
Pressing and holding ↘ or ↙ for at least 2 seconds will cancel the voice dial mode.

- *If the voice dial fails, the unit will return to normal mode in 30 seconds.*
- *You can perform this operation only when a voice dial compatible mobile phone is connected. If the mobile phone is not compatible with the voice dial, "NO SUPPORT" is displayed for 2 seconds.*
- *The Voice Dial function performance depends on the recognition range of the mobile phone and mounting location of the microphone. Note when the microphone is mounted.*
- *This operation cannot be performed when the current source is Bluetooth AUDIO, and "NO SUPPORT" is displayed for 2 seconds.*
- *If a called person that you say is not found, "NO CALL" is displayed for 2 seconds.*
- *Voice dial operation depends on the function of the mobile phone. For details, refer to the Owner's Manual of the mobile phone.*
- *If you place a call via voice dial, you cannot display a phone number or name.*

Adjusting the volume when receiving a Call

While calling, you can adjust the volume. The adjusted volume level is stored.

Turn the Rotary encoder or the Double Action encoder to adjust the volume.

- *You may need to increase volume from your regular audio listening source level. However, increasing the volume excessively may result in feedback. If feedback is noticed as feedback is directly related to the volume, turn down the volume as low as acceptable to eliminate it. Positioning the microphone in a direction away from the main car speakers (e.g. clipped on sun visor) may also reduce feedback at high volume.*

Redial Function

You can redial the person you have previously called.

After finishing a call, press ↙ or ↘ within 5 seconds.
The telephone is redialed.

Audio Switching Operation (CD Head Unit Only)

While making a call, this function allows you to initiate the transfer of the audio between the mobile phone and the speakers in the car.

While calling, press and hold ENT for at least 2 seconds to switch the call sound between the speakers in car and mobile phone.

- *Depending on the mobile phone, this operation may not be performed.*

Call History

Call History is recorded for the last dialed/received/missed calls. There are various ways of making calls based on the "Call History." The following steps 1 to 4 are common to the various ways of making these calls. For details, refer to each individual category for making calls.

1 Press ↙ or ↘.
The outgoing method list is displayed.

2 Turn the Rotary encoder or the Double Action encoder to select the outgoing mode.

Setting items	: DIALED / RECEIVED / MISSED / PHONE BOOK
DIALED	: Dialed history
RECEIVED	: Received history
MISSED	: Missed incoming history
PHONE BOOK	: Mobile phonebook

- *The adapter will update the information in the Call History automatically each time a mobile phone is connected or receiving/dialing a call. At this time, if you select any outgoing mode, "UPDATING" will be displayed.*

3 Press ENT.
The outgoing mode is activated, and each mode list is displayed.

- *It may take some time for the list to be displayed, and also directly after connection, the list may not be brought up to date.*

4 Turn the Rotary encoder or the Double Action encoder to select a name or a telephone number from the list.

5 Press ENT.
The selected telephone will be called.

If one name has several numbers registered in the telephone book for CD Head Unit, press ENT after selecting the name*, then turn the Rotary encoder to choose the desired number and press ENT, the telephone will be called. Press and hold ENT for at least 2 seconds after selecting the name, the default number of the name will be called. Depending on the connected mobile phone, this function may not be performed. (Only for CD Head Unit)

* *If the name cannot be recognized, default number will be displayed.*

- *If you place a call directly from the paired mobile phone, the phone number is not displayed, you cannot redial from the unit in this case.*

Redialing a Number in Dialed Calls History

Previously dialed telephone numbers are stored in dialed calls history. You can redial a number by searching from dialed calls history.

Setting item: DIALED

Dialing a Number in Received Calls History

Telephone numbers from received calls are stored in the received calls history. You can redial these numbers by searching here.

Setting item: RECEIVED

Dialing a Number in Missed Calls History

Telephone numbers for received calls that are missed are stored in the missed calls history. You can redial these numbers by searching here.

Setting item: MISSED

Dialing a Number In the Phone Book (PHONE BOOK)

Up to 1,000 telephone numbers are downloadable to the Bluetooth compatible unit from a mobile phone. Dial a call by selecting a person from the phone book list.

Setting item: PHONE BOOK

- *If a name cannot be obtained via the phone book, only the "----------" is displayed.*
- *The names registered in the telephone book are displayed. If the name is not registered, a number is displayed. If both name and number cannot be displayed, "ID UNSENT" will be displayed.*
- *The names of PHONE BOOK are listed alphabetically with the same beginning alphabetical character, and can be skipped to the next alphabetical character by pressing ◀ or ▶.*
  e.g. press ▶ to the section beginning with alphabet B from A. (Only for CDA-105 Series)
- *The order of the list display depends on the design of the mobile phone.*
- *If the call history or phonebook of the mobile phone is added or deleted while it is connected to the unit, the list displayed on the unit may not be brought up to date. If it is not updated, you cannot correctly place a call.*

Bluetooth Audio Function

Bluetooth Audio Operation

Audio information of a Bluetooth compatible mobile phone, a portable player, etc., is controllable/playable wirelessly* from an ALPINE Bluetooth compatible CD Head Unit or Digital Media Receiver.

* *To play back audio, a mobile phone or a portable player conforming to A2DP (Advanced Audio Distribution Profile) or AVRCP (Audio/Video Remote Control Profile) is required.*
Not all functions work with all devices.

- *During a call, sound on the Bluetooth audio source is muted.*

Recalling the Bluetooth Mode

Press SOURCE to activate the Bluetooth audio mode.

Selecting the desired Song

Press ⏮.
Returns the beginning of the song being played back.

Press ⏭.
Forwards the next song.

Pausing

Press ⏯.
A playback stops. Touching again will resume a playback.

Accessories

Check accessory parts.

KCE-400BT Module

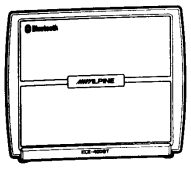

x 1

Power Cable



x 1

Microphone

x 1

Bluetooth Interface Cable

x 1

Velcro Fastener

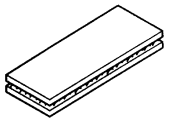

x 2

Microphone Mounting Brackets



x 1

Interconnection Cable (Only for KCE-400BT purchased in the Europe)



x 1

Installation

Velcro fastener Mounting

For the sake of safety, mount the adapter in one of the following locations.

- Do not mount the adapter under your feet. Do not step on the adapter, or press excessively on it.
- Before mounting the adapter, secure enough space at its upper side to prevent noise or to result in malfunction when sending or receiving data.
- Depending on the adapter mounting location noise may occur when using a Bluetooth compatible device, or a malfunction may result when sending or receiving data. In this case, mount the adapter in another location.

Attach one side of the Velcro fastener to the box.
Remove the backing from the other side of the Velcro strip. Gently press the adapter onto its selected mounting location.

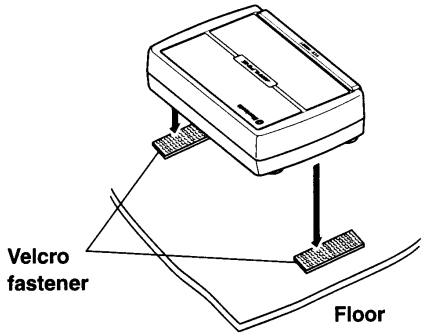

Mounting the Microphone

For the sake of safety, mount the microphone in the following location.

- In a stable and secure location.
- In a location that does not inhibit safely driving the vehicle.
- Mount the microphone in a location where the driver's voice can easily be picked up.

Choose a location for the microphone that can easily pick up the drivers voice. Requiring the driver to move towards the mic for audibility causes a distraction that could be dangerous.

Mount the microphone using the supplied Velcro fastener or the bracket.

Connections

Connect a Bluetooth compatible unit and an iPhone/iPod to the Bluetooth INTERFACE

Before the operation, be sure to set "INT MUTE" and "AUX+" (in the setup function of the connected head unit*) to OFF.

* *Head unit includes CD Head Unit, AV Head Unit and Digital Media Receiver.*

- *When the KCE-400BT is connected to a head unit, the INT MUTE setting may not be possible, depending on the head unit.*
- *The AUX+ setting may not be possible, depending on the head unit.*
- *For details, refer to the Owner's Manual of the head unit.*

Connections for the head unit with Full Speed connector / Bluetooth INTERFACE connector

Bluetooth compatible unit:
CDE-101 Series/CDE-102 Series/CDE-W203 Series/CDA-105 Series/iDA-X301 Series/iDA-X303 Series/iDA-X305 Series

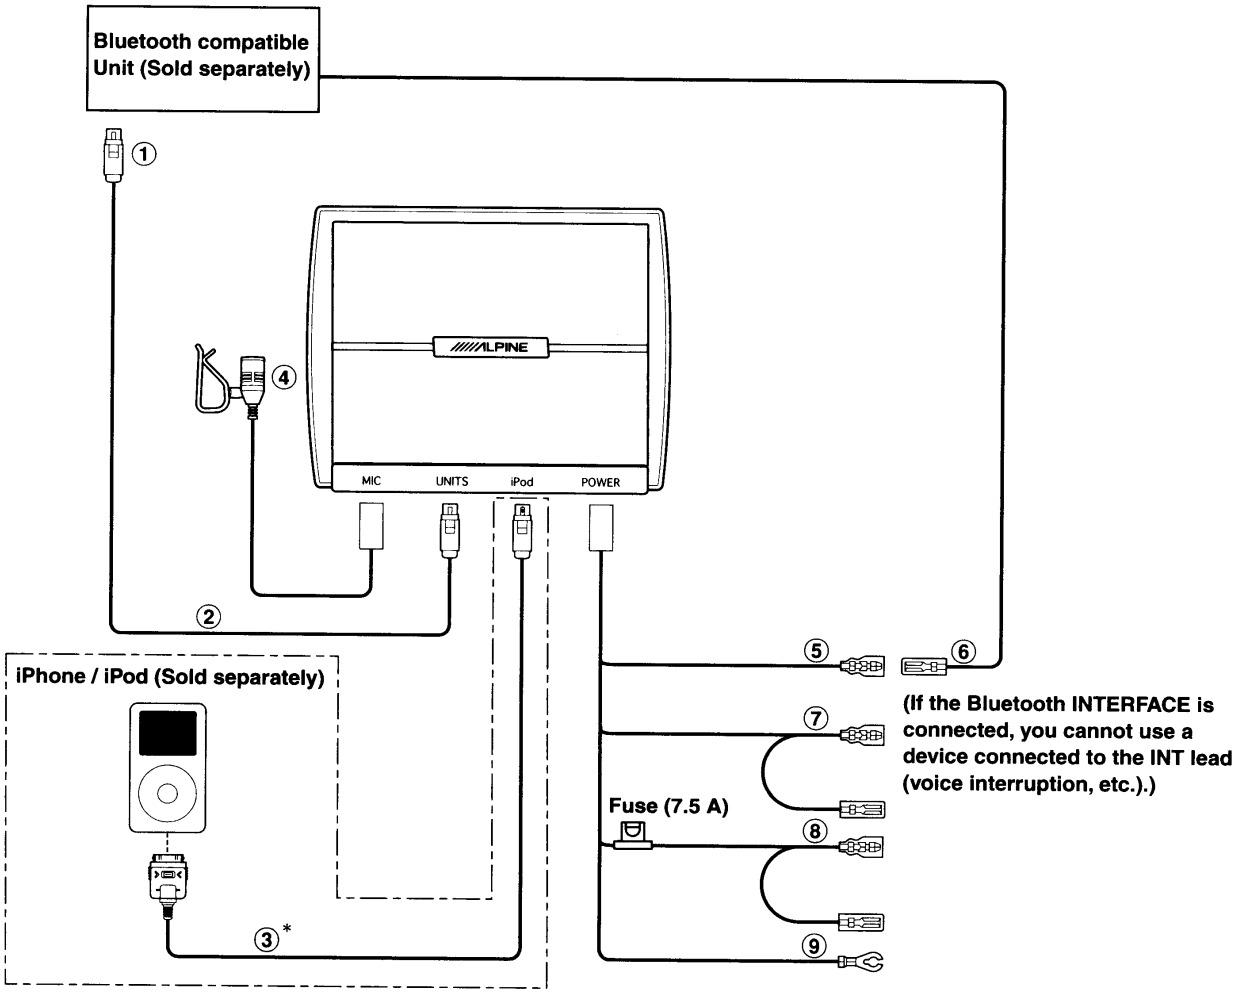

① **To Full Speed connector / Bluetooth INTERFACE connector**

② **Bluetooth INTERFACE Cable (Included)**

③ **The FULL SPEED™ Connection Cable (KCE-433iV) may be supplied with the head unit. If not, purchase separately.**

* *This connection can be made only for the CDE-101 Series/ CDE-102 Series/iDA-X301 Series/CDE-W203 Series. For details, refer to the Owner's Manual of the Bluetooth compatible head unit.*

- *An iPhone cannot be connected for iDA-X301 Series.*

④ **Microphone (Included)**

⑤ **Audio Interrupt Out lead (Pink/Black)**
Be sure to connect only when power is turned off, as a malfunction may result.

⑥ **Audio Interrupt In lead (Pink/Black)**

⑦ **ACC (Ignition) lead (Red)**
To the ACC Power lead.

⑧ **Battery lead (Yellow)**
Connect this lead to a terminal that constantly provides power (to the positive (+) post of the battery).

⑨ **Ground lead (Black)**
Connect to a metal part of chassis body with screw.

Connections for the head unit with iPod Direct Connector

Bluetooth compatible unit:
CDE-9872, 9874 Series/CDE-9880R, CDE-9882Ri/CDA-988* Series/iDA-X001, 100, 200, 300 Series/IVA-W202, W205 Series/ IVA-W502, W505 Series/IVA-D105, D106 Series

- *The head units CDE-9872 and CDE-9872L purchased in the America are not Bluetooth compatible.*

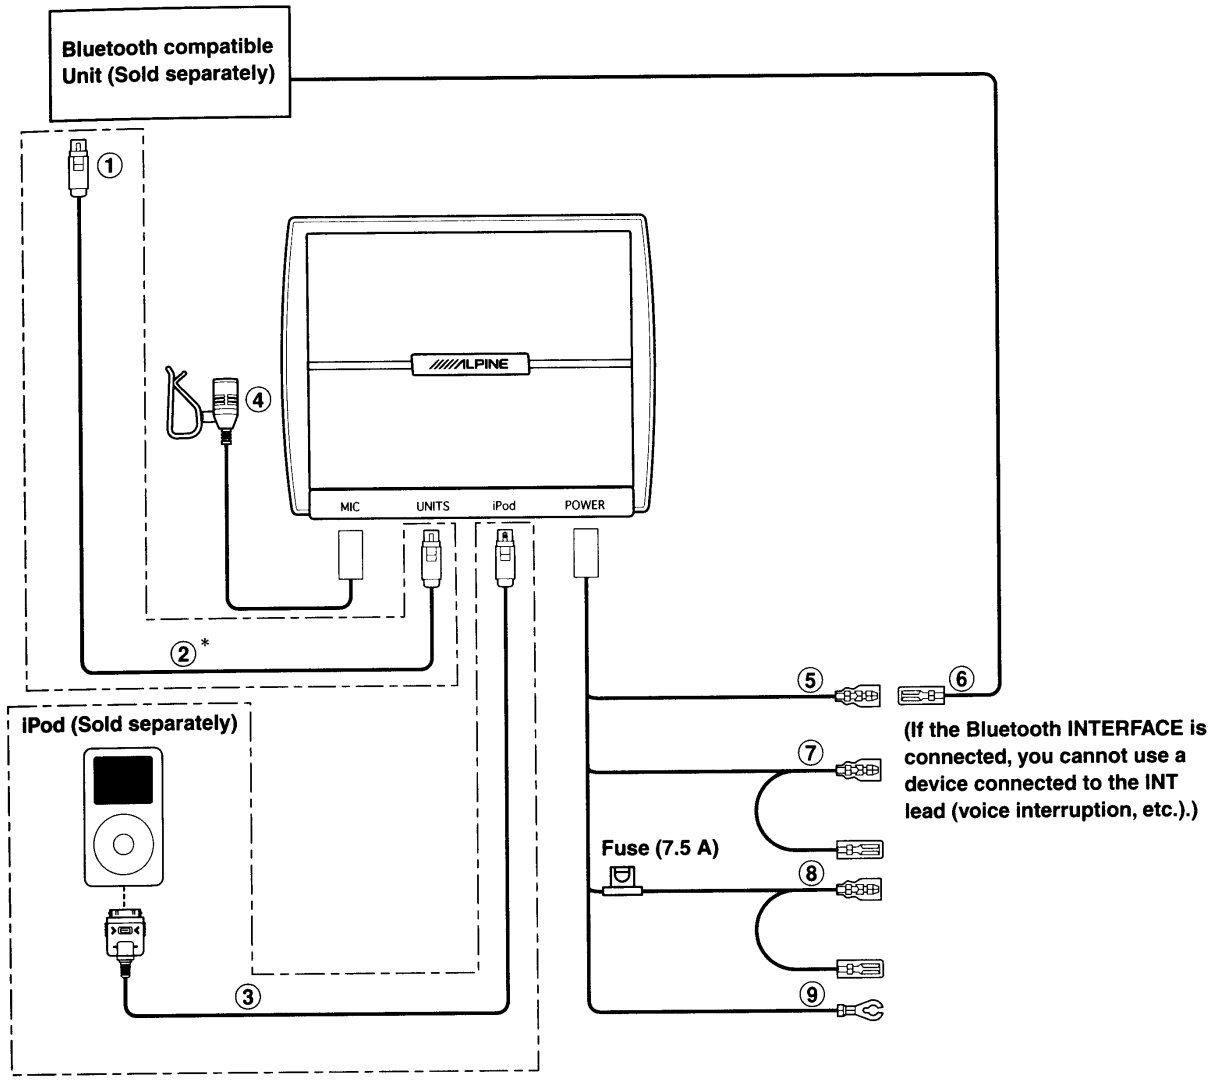

① To iPod Direct Connector

② Interconnection Cable (KWE-460E) (Sold separately)

* *This connection is not available for the head units purchased in the Europe. For the European users, please refer to the card "Interconnection Cable for KCE-400BT" supplied with the adapter.*

③ The FULL SPEED™ Connection Cable (KCE-433iV) (Sold separately)

④ Microphone (Included)

⑤ Audio Interrupt Out lead (Pink/Black)
Be sure to connect only when power is turned off, as a malfunction may result.

⑥ Audio Interrupt In lead (Pink/Black)

⑦ ACC (Ignition) lead (Red)
To the ACC Power lead.

⑧ Battery lead (Yellow)
Connect this lead to a terminal that constantly provides power (to the positive (+) post of the battery).

⑨ Ground lead (Black)
Connect to a metal part of chassis body with screw.

Specifications

BLUETOOTH SECTION

Bluetooth Specification	Bluetooth V2.0
Output Power	+4 dBm Max. (Power class 2)
Profile	HFP (Hands-Free Profile)
	HSP (Head Set Profile)
	A2DP (Advanced Audio Distribution Profile)
	AVRCP (Audio/Video Remote Control Profile)

GENERAL

Power Requirement	13.5V DC
	(10-16 V allowable)
Weight	96 g

CHASSIS SIZE

Width	95 mm (3-3/4")
Height	25 mm (1")
Depth	77 mm (3")

- *The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under license. Other trademark and trade names are those of their respective owners.*
- *iPod is a trademark of Apple Inc., registered in the U.S. and other countries.*
- *iPhone is a trademark of Apple Inc.*

To customers/Hinweis an Kunden/A l'attention de l'utilisateur/ Información para los clientes/Informazioni per i clienti/ Till kunder/Aan klanten/Для клиентов/Do klientów/Προς τους πελάτες/ 致客戶/致客户/お客様へ

ALPINE

English

If this adapter is connected to the following units, certain operations may cause unstable state.
If this occurs, turn the ignition key off, then on again.

Operation: While placing or receiving a call in the Bluetooth Audio source, turn the ignition OFF during the call.

State:

① Though the ignition key is turned on again after performing the above described operation, the Bluetooth audio source cannot be played back, and "NO DEVICE" appears in the display on the head unit.
② If an iPhone/iPod is connected at the same time, the iPhone/iPod is displayed as "SEARCHING" and cannot be played back.

The connected units:
CDE-101 series / CDE-102 series / CDE-W203 series

Deutsch

Wenn dieser Adapter an die folgenden Geräten angeschlossen wird, können bestimmte Vorgänge zu einem instabilen Betrieb führen.
Wenn dieser Fall eintritt, schalten Sie die Zündung aus und dann wieder ein.

Vorgang: Während Sie in der Bluetooth-Audio-Quelle einen Anruf tätigen oder empfangen, schalten Sie während des Anrufs die Zündung auf OFF (Aus).

Zustand:

① Obwohl die Zündung nach dem Ausführen des oben beschriebenen Vorgangs wieder eingeschaltet wurde, kann die Bluetooth-Audio-Quelle nicht wiedergegeben werden und „NO DEVICE" wird in der Anzeige des Hauptgeräts angezeigt.
② Wenn zur selben Zeit ein iPhone/iPod angeschlossen ist, wird das iPhone/der iPod als „SEARCHING" angezeigt und kann nicht wiedergegeben werden.

Die angeschlossenen Geräte:
CDE-101 Serie / CDE-102 Serie / CDE-W203 Serie

Français

Si cet adaptateur est raccordé aux unités suivantes, il est possible que certaines opérations provoquent un état instable du système.
Le cas échéant, coupez le contact, puis mettez-le à nouveau.

Opération : Lorsque vous effectuez ou recevez un appel dans la source audio Bluetooth, coupez le contact lors de l'appel.

Etat :

① Bien que vous ayez remis le contact après avoir effectué l'opération décrite ci-dessus, il est impossible de lire la source audio Bluetooth et l'indication « NO DEVICE » s'affiche sur l'écran de l'unité principale.
② Si vous raccordez également un iPhone/iPod, l'unité affiche « SEARCHING » et la lecture de l'iPhone/iPod s'avère impossible.

Les unités raccordées :
Modèles CDE-101 / Modèles CDE-102 / Modèles CDE-W203

Español

Si este adaptador se conecta a las siguientes unidades, es posible que no funcionen correctamente en determinadas condiciones.
Si esto ocurre, apague el contacto y vuelva a encenderlo.

Operación: Mientras realiza o recibe una llamada en la fuente de audio Bluetooth, apague el contacto (OFF) durante la llamada.

Estado:

① Aunque el contacto se encienda después de haber realizado la operación descrita anteriormente, la fuente de audio Bluetooth no se puede reproducir y "NO DEVICE" aparece en la pantalla de la unidad principal.
② Si se conecta un iPhone y un iPod al mismo tiempo, el iPhone/iPod se muestra como "SEARCHING" y no se puede reproducir.

Las unidades conectadas:
Serie CDE-101 / Serie CDE-102 / Serie CDE-W203

Italiano

Se l'adattatore viene collegato alle seguenti unità, eseguendo determinate operazioni potrebbero verificarsi anomalie di funzionamento.
In tal caso, spegnere e riaccendere il motore girando la chiave di accensione.

Operazione: Se si esegue o si riceve una chiamata tramite la sorgente audio Bluetooth, spegnere il motore durante la chiamata.

Stato:

① Anche se si riporta la chiave di accensione in posizione di accensione dopo aver eseguito l'operazione sopra descritta, non è possibile riprodurre l'audio proveniente dalla sorgente Bluetooth, e sul display dell'unità principale appare la dicitura "NO DEVICE" (Nessuna periferica).
② Se contemporaneamente si collega un iPhone/iPod, viene visualizzata l'indicazione "SEARCHING" (RICERCA IN CORSO) per l'Phone/iPod, e la riproduzione non può essere eseguita.

Unità collegate:
Serie CDE-101 / Serie CDE-102 / Serie CDE-W203

Svenska

Om denna adapter är ansluten till följande enheter kan vissa funktioner orsaka ett instabilt tillstånd.
Om detta uppstår ska du vrida av tändningslåset och därefter vrida på det igen.

Funktion: Vrid tändningen till avstängt läge (OFF) om du ringer eller tar emot ett samtal i Bluetooth-ljudkällan.

Tillstånd:

① Även om tändningsnyckeln vrids på efter att ovan nämnda funktion utförts, kan inte Bluetooth-ljudkällan spelas upp och "NO DEVICE" visas i huvudenhetens teckenfönster.
② Om en iPhone/iPod är ansluten samtidigt visas den som "SEARCHING" och kan inte spelas upp.

De anslutna enheterna:
CDE-101-serien / CDE-102-serien / CDE-W203-serien

Dutch

Als deze adapter op de volgende apparaten wordt aangesloten, kunnen bepaalde bewerkingen een onstabiele toestand veroorzaken.
Schakel de contactsleutel eerst uit en daarna weer in, als dit gebeurt.

Bediening: Schakel de contactsleutel UIT tijdens de oproep, wanneer u via het Bluetooth-audio-apparaat belt of een oproep ontvangt.

Status:

① Hoewel de contactsleutel na de bovengenoemde handeling weer wordt ingeschakeld, kan het Bluetooth-audio-apparaat niet worden afgespeeld. Er verschijnt "GEEN APPARAAT" op de display van de hoofdunit.
② Als een iPhone/iPod tegelijkertijd is aangesloten, wordt de iPhone/iPod weergegeven als "BEZIG MET ZOEKEN" en kan deze niet worden afgespeeld.

De aangesloten units:
CDE-101-serie / CDE-102-serie / CDE-W203-serie

Russian

Подключение адаптера к следующим устройствам может стать причиной сбоев в работе оборудования.
В таком случае рекомендуется выключить и включить зажигание.

Эксплуатация: Во время вызова, выполняемого или получаемого с помощью источника звука Bluetooth Audio, выключите зажигание (OFF).

Состояние:

① В результате включения зажигания после выполнения описанной выше операции воспроизведение с помощью источника звука Bluetooth невозможно; на дисплее базового блока выводится надпись “NO DEVICE” (“Устройство отсутствует”).
② В случае одновременного подключения устройства iPhone/iPod, устройство iPhone/iPod отображается как “SEARCHING” (“Поиск”); воспроизведение невозможно.

Подсоединенные устройства:
Серия CDE-101 / Серия CDE-102 / Серия CDE-W203

Polish

Jeśli adapter zostanie podłączony do innych urządzeń, które wymieniono poniżej, niektóre działania mogą powodować problemy.
W takim wypadku należy ustawić kluczyk w stacyjce w pozycji OFF (WYŁ.), a następnie ponownie ustawić go w pozycji ON (WŁ.).

Działanie: Przed nawiązywaniem i odebraniem połączenia za pomocą źródła Bluetooth Audio należy ustawić kluczyk w stacyjce w pozycji OFF (WYŁ.).

Stan:

① Chociaż po wykonaniu powyższych czynności kluczyk w stacyjce ponownie ustawia się w pozycji ON (WŁ.), nie można odtwarzać dźwięku ze źródła Bluetooth Audio, a na wyświetlaczu urządzenia głównego pojawia się komunikat „NO DEVICE” (BRAK URZĄDZENIA).
② Jeśli do urządzenia jest jednocześnie podłączony telefon iPhone/odtwarzacz iPod, zamiast jego nazwy na wyświetlaczu pojawia się komunikat „SEARCHING” (WYSZUKIWANIE) i z telefonu/odtwarzacza nie można odtwarzać dźwięku.

Podłączone urządzenia:
CDE-101 / CDE-102 / CDE-W203

Greek

Εάν αυτός ο μετατροπέας συνδεθεί με τις ακόλουθες μονάδες, ορισμένες λειτουργίες ενδέχεται να προκαλέσουν ασταθή κατάσταση.
Σε αυτήν την περίπτωση, σβήστε τη μίζα και, στη συνέχεια, ανάψτε την ξανά.

Λειτουργία: Ενώ πραγματοποιείτε ή λαμβάνετε μια κλήση στην πηγή ήχου Bluetooth, σβήστε τη μίζα κατά τη διάρκεια της κλήσης.

Κατάσταση:

① Παρόλο που η μίζα ενεργοποιείται ξανά μετά την εκτέλεση της λειτουργίας που περιγράφεται παραπάνω, δεν είναι δυνατή η αναπαραγωγή της πηγής ήχου Bluetooth και η ένδειξη "NO DEVICE" (δεν υπάρχει συσκευή) εμφανίζεται στην οθόνη της κύριας μονάδας.
② Εάν ένα iPhone/iPod συνδεθεί την ίδια στιγμή, το iPhone/iPod εμφανίζεται ως "SEARCHING" (αναζήτηση) και δεν είναι δυνατή η αναπαραγωγή του.

Οι συνδεδεμένες μονάδες:
Σειρά CDE-101 / Σειρά CDE-102 / Σειρά CDE-W203

中文（繁）

如果本轉接器連接至以下裝置，某些操作可能會造成狀態不穩定。
如果發生此情況，請關閉點火開關，然後再打開。

操作：使用藍芽音源並且撥打或接聽電話時，在通話過程中關閉點火開關。

狀態：

① 雖然在執行上述操作後再次打開點火開關，但是無法播放藍芽音源，且 “NO DEVICE”出現在主機的顯示幕上。
② 如果同時連接 iPhone/iPod，iPhone/iPod 會顯示爲 “SEARCHING”且無法播放。

連接的裝置：
CDE-101 系列 / CDE-102 系列 / CDE-W203 系列

中文（简）

如果本适配器与以下装置连接，某些操作可能会造成状态不稳定。
如果发生这种情况，关闭点火开关，然后再打开。

操作：使用蓝牙音源并且拨打或接听电话时，在通话过程中关闭点火开关。

状态：

① 尽管在执行上述操作后再次打开点火开关，也无法播放蓝牙音源，且主机显示屏上出现 “NO DEVICE”。
② 如果同时连接 iPhone/iPod， iPhone/iPod 会显示为 “SEARCHING”且无法播放。

连接的裝置：
CDE-101 系列 / CDE-102 系列 / CDE-W203 系列

和文

本機を以下製品と組み合わせてお使いになる場合、特定の操作を行うことで本機の動作が不安定となる場合があります。
その際は、イグニッションキーを一度 OFF にしたあと、再度イグニッションキーを ON にしてください。

操作：Bluetooth オーディオソースを再生中に Bluetooth 携帯電話での発信 / 着信があり、通話状態のままイグニッションキーを OFF にする。

状態：

① 上述操作後に再度イグニッションキーを ON にしても Bluetooth オーディオソースが再生できない。またヘッドユニット表示部に「NO DEVICE」と表示される。
② iPhone/iPod を同時に接続している場合、iPhone/iPod が「SEARCHING」表示のままとなり再生できない。

対象となる接続製品
CDE-101Jj / CDE-102Ji / CDE-W203Ji

About the Rules of Bluetooth Electromagnetic Radiation Regulation / 关于蓝牙的电波法规定要求 / Bluetooth 측면에서 전파법 규정 / 關於藍芽的電波法規定要求 / Acerca das Regras de Regulação da Radiação Electromagnética da Bluetooth / Información sobre la Normativa sobre radiación electromagnética para dispositivos Bluetooth

Country / 国家 / 국가 / 國家 / País / País	Rules of Electromagnetic Radiation Regulation / 电波法规定 / 전파법 규정 / 電波法規定 / Regras de Regulação da Radiação Electromagnética / Normativa sobre la radiación electromagnética
USA/Canada	This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This class B digital apparatus complies with Canadian ICES-003. Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada. **FCC WARNING** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTICE** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
Europe	CE **Declaration of Conformity** • Refer to the next page.
中国	1. 本产品技术指标和使用范围 使用频率：2.4-2.4835 GHz 等效全向辐射频率（EIRP）：≤100 mW 最大功率谱密度：≤20 dBm/MHz（EIRP） 载频容限：20 ppm 2. 不得擅自更改发射频率、加大发射功率（包括额外加装射频功率放大器），不得擅自外接天线或改用其它发射天线； 3. 使用时不得对各种合法的无线电通信业务产生有害干扰；一旦发现有干扰现象时，应立即停止使用，并采取措施消除干扰后方可继续使用； 4. 使用微功率无线电设备，必须忍受各种无线电业务的干扰或工业、科学及医疗应用设备的辐射干扰； 5. 不得在飞机和机场附近使用。
한국	당해 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.
台灣	低功率電波輻射性電機管理辦法（930322） 第十二條　經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。 第十四條　低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。 前項合法通信，指依電信法規定作業之無線電通信。 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
Brasil	Resolução 365 – ANATEL: "Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário." Para consultas, visite: www.anatel.gov.br Este equipamento está homologado pela ANATEL de acordo com os procedimentos regulamentados pela Resolução 242/2000 e atende aos requisitos técnicos aplicados.
México	Este equipo opera a titulo secundario, consecuentemente, debe aceptar interferencias perjudiciales incluyendo equipos de la misma clase y puede no causar interferencias a sistemas operando a titulo primario.
UAE	Approved by TRA

Alpine Electronics, Inc.
20-1 Yoshima- Kogyodanchi, Iwaki, Fukushima 970-1192, Japan
Phone: +81-246-36-4111 Fax: +81-246-36-6090

Declaration of Conformity

We, the undersigned,

Authorized representative in Europe	**: Alpine Electronics (Europe) GmbH**
Address, City	**: Frankfurter Ring 117,80807 Munich**
Country	**: Germany**

certify and declare under our sole responsibility that the following apparatus :

Description	**: CD Player with Radio Receiver**
Manufacturer	**: Alpine Electronics, Inc.**
Brand	**: ALPINE**
Identification	**: KCE-400BT (MXAG808A)**
Installed BlueTooth module	**: CK5050**
Test Report No.	**: EMITECH ATLANTIQUE Laboratory**
	Radio :RA-24-08102396-1/A Ed.0
	EMC :RA-22-08102396-1/A Ed.0
	LVD :RA-26-08102236-1/A Ed.0

conforms with the essential requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC, based on the following specifications applied:

Radio : EN300328 V1.7.1(2006-10)
EMC : EN301489-1 V1.6.1(02), EN301489-17 V1.2.1(02)
LVD : EN60950-1 2001/A11 2004

and therefore complies with the essential requirements and provisions of the R&TTE Directive.

The Technical documentation is kept at the following address:

Company	**: Alpine Electronics (Europe) GmbH**
Address, City	**: Frankfurter Ring 117,80807 Munich**
Country	**: Germany**
Phone number	**: 49(0)89-324264-240**
Fax number/e-mail	**: 49(0)89-324264-241**

Name and position of person binding the manufacturer or his authorized representative	**: Shinichi Asuke** **Development Planning Dept.** **Alpine Electronics, Inc.**
Signature of the authorized person	: S. Asuke
Date of issue	**: October 09, 2008**

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路板组件 *	×	○	○	○	○	○
壳体组件	○	○	○	○	○	○
附件	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 《电子信息产品中有毒有害物质的限量要求标准》规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 《电子信息产品中有毒有害物质的限量要求标准》规定的限量要求；但是上表中打“×”的部件，其含量超出是因为目前业界还没有成熟的可替代的技术。

* 电路板组件包括印刷电路板及其构成的零部件，如电阻、电容、集成电路、连接器等。

S/NO. LABEL

HANDS-FREE OPERATION with COMPATIBLE Bluetooth® PHONES
Bluetooth® AUDIO PLAYBACK CAPABILITY
Bluetooth® FIRMWARE UPDATABLE
FULL SPEED™ CONNECTION for iPhone/iPod

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under license.
Other trademarks and trade names are those of their respective owners.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
iPhone is a trademark of Apple Inc.

UTILISATION MAIN LIBRE pour téléphone Bluetooth® COMPATIBLE
COMPATIBLE Bluetooth® AUDIO
LOGICIEL Bluetooth® EVOLUTIF
CONNEXION FULL SPEED™ pour iPhone/iPod

Le nom et le logo Bluetooth sont la propriete de Bluetooth SIG, Inc. et toutes les utilisations faites par Alpine Electronics, Inc. sont effectuees sous licence.
Les autres marques et noms sont ceux de leur proprietaires respectifs.

iPod est une marque commerciale d'Apple Inc., déposée aux Etats Unis et dans d'autres pays.
iPhone est une marque commerciale d'Apple Inc.

ALPINE ELECTRONICS, INC.
www.alpine.com

MADE IN CHINA
DESIGNED BY ALPINE JAPAN

FABRIQUE EN CHINE
CONÇU PAR ALPINE JAPON

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 320 TORRANCE CA

POSTAGE WILL BE PAID BY ADDRESSEE

ATTENTION MARKETING SERVICES
ALPINE ELECTRONICS OF AMERICA INC
PO BOX 2859
TORRANCE CA 90509-9939

↑ FOR USE IN USA, PLEASE FOLD HERE AND ENSURE THAT AMERICAN ADDRESS FACES UP.

↓ FOR USE IN CANADA, PLEASE FOLD HERE AND ENSURE THAT CANADIAN ADDRESS FACES UP.

AIR MAIL
PAR AVION

IBRS/CCRI No. 320

INTERNATIONAL BUSINESS REPLY MAIL/RESPONSE PAYEE

PERMIT NO. 320 TORRANCE CA

POSTAGE WILL BE PAID BY ADDRESSEE

ALPINE ELECTRONICS
19145 GRAMERCY PL
TORRANCE CA 90501-9876
UNITED STATES OF AMERICA

NE PAS AFFRANCHIR
NO POSTAGE
NECESSARY
IF MAILED
TO THE
UNITED STATES

ALPINE Customer Care Registration

For easy on-line registration, go to "www.alpine-usa.com/registration"

Thank you for choosing Alpine! Register your product to protect your investment and receive up-to-date product information.

First name: _____

Last name: _____

Home address: _____
Street address

_____

_____ _____ _____
City State/Prov. Zip/Postal Code

Phone number: ( )

E-mail Address: _____

May we contact you? 1. ☐ Yes 2. ☐ No

Gender 1. ☐ Male 2. ☐ Female

Date of Birth Month: _____ Year: _____

Marital Status 1. ☐ Single 2. ☐ Married

Which ethnicity best describes yourself:

1. ☐ Caucasian
2. ☐ Hispanic
3. ☐ African-American
4. ☐ Asian
5. ☐ Other _____

Your highest level of education completed:

1. ☐ High School Student
2. ☐ High School Graduate
3. ☐ 2 Yr. Degree/Some College
4. ☐ Completed 4 Yr. College
5. ☐ Completed Graduate School

Occupation

1. ☐ Executive/Managerial
2. ☐ Secretarial/Clerical
3. ☐ Sales
4. ☐ General Labor
5. ☐ Professional
6. ☐ Engineering/Technical
7. ☐ Agriculture
8. ☐ Retired
9. ☐ Student
10. ☐ Other_____

Household Income

1. ☐ Less than $30,000
2. ☐ $30,000 - $50,000
3. ☐ $50,000 - $70,000
4. ☐ $70,000 - $90,000
5. ☐ $90,000 - $110,000
6. ☐ Over $110,000

Which of the following statements best describes you?

1. ☐ I usually have more electronic equipment than my friends
2. ☐ I am usually one of the first of my friends to buy the newest electronic equipment
3. ☐ I usually wait until a product has been out for a while before I purchase it
4. ☐ I am usually one of the first of my friends to know about the newest car
5. ☐ I usually know more about cars than my friends

Product purchased

1. ☐ Head unit
2. ☐ A/V Head unit
3. ☐ Factory Integration Technology
4. ☐ Installed Navigation
5. ☐ Amplifier
6. ☐ Speaker
7. ☐ Subwoofer
8. ☐ Multi-Channel Solution
9. ☐ Rear Seat Entertainment
10. ☐ iPod Solutions
11. ☐ Marine
12. ☐ Other_____

Model Number: _____

Serial Number: _____

Date of Purchase: Month: _____ Year: _____

If you purchased a navigation system, which A/V Head unit did you purchase?

1. ☐ Alpine → (Model No.) _____
2. ☐ Other → (Brand Name) _____

Purpose of buying this unit:

1. ☐ Addition
2. ☐ Replacement → **Previous brand replaced?**
   1. ☐ Factory installed 2. ☐ Alpine
   3. ☐ Other _____

When you purchased this Alpine unit, did you compare it with other brands?

1. ☐ Yes 2. ☐ No.

If yes, select all that apply.

1. ☐ Pioneer 2. ☐ Kenwood 3. ☐ Sony
4. ☐ JVC 5. ☐ JL 6. ☐ Rockford
7. ☐ Other:_____

Have you purchased Alpine products before?

1. ☐ Yes 2. ☐ No

Please tell us the type of vehicle you installed the Alpine component(s) into:

Make: _____ Model: _____

Model Year: _____

How was this vehicle purchased?

1. ☐ Buy 2. ☐ Lease

SEAL HERE

Thank you for your cooperation! We value your privacy. This information will remain confidential with Alpine and its affiliates.

Customer Care Registration is for Product registration.
Failure to complete and return this card does not diminish your warranty rights.

PART NO. 68-10872Z57-A

GARANTIE LIMITÉE

Fidèles à leur engagement de ne fournir que des produits de qualité, ALPINE ÉLECTRONIQUE DE L'AMÉRIQUE, INC. et ALPINE ÉLECTRONIQUE DU CANADA, INC. (Alpine) sont heureuses de vous offrir cette garantie. Nous vous suggérons de le lire attentivement et en entier. Si vous avez la moindre question, veuillez contacter l'un de nos concessionnaires ou appeler directement Alpine aux numéros listés ci-dessous.

● PRODUITS COUVERTS PAR LA GARANTIE

Cette garantie couvre les produits audio de voiture et les accessoires connexes ("le produit"). Elle ne couvre les produits que dans le pays où ils ont été achetés.

● DURÉE DE LA GARANTIE

Cette garantie est en vigueur pendant un an à partir de la date du premier achat du client.

● PERSONNES PROTÉGÉES PAR LA GARANTIE

Seul l'acheteur original du produit, s'il résisde aux États-Unis, à Porto Rico ou au Canada, peut se prévaloir de la garantie.

● CE QUI EST COUVERT

Cette garantie couvre tous les défauts de matériaux et de fabrication (pièces et main d'œuvre) du produit.

● CE QUI N'EST PAS COUVERT

Cette garantie ne couvre pas ce qui suit:

① Les dommages survenus durant le transport des produits renvoyés à Alpine pour être réparés (les réclamations doivent être adressées au transporteur);

② Les dégâts provoqués par un accident ou une mauvaise utilisation, y compris des bobines acoustiques grillées suite à une surexcitation des enceintes (augmentation du niveau de l'amplificateur jusqu'à atteindre un effet de distorsion ou d'écrêtage), une défaillance mécanique des enceintes (perforations, déchirures ou fentes), panneaux LCD fissurés ou endommagés, disques durs endommagés ou ayant subi une chute.

③ Tout dégât provoqué par négligence, usage inapproprié, mauvaise utilisation ou par le non-respect des instructions indiquées dans le manuel de l'utilisateur.

④ Les dommages dus à la force majeure, notamment aux tremblements de terre, au feu, aux inondations, aux tempêtes ou aux autres cataclysmes naturels;
Les frais ou les dépenses relatifs à l'enlèvement ou à la réinstallation du produit;

⑤ Les services rendus par une personne, physique ou morale non autorisée;

⑥ Les produits dont le numéro de série a été effacé, modifié ou retiré;

⑦ Les produits qui ont été adaptés ou modifiés sans le consentement d'Alpine;

⑧ Les produits qui ne sont pas distribués par Alpine aux Etats-Unis, à Porto Rico ou au Canada;

⑨ Les produits qui n'ont pas été achetés par l'entremise d'un concessionnaire Alpine autorisé;

● COMMENT SE PRÉVALOIR DE LA GARANTIE

① Il vous faut remettre le produit nécessitant des réparations à un centre de service autorisé Alpine ou à Alpine même et en assumer les frais de transport. Alpine a le choix entre réparer le produit ou le remplacer par un produit neuf ou révisé, le tout sans frais pour vous. Si les réparations sont couvertes par la garantie et si le produit a été envoyé à un centre de service Alpine ou à Alpine, le paiement des frais de réexpédition du produit incombe Alpine.

② Vous devez donner une description détaillée des problèmes qui sont à l'origine de votre demande de réparation.

③ Vous devez joindre la preuve de votre achat du produit.

④ Vous devez emballer soigneusement le produit pour éviter tout dommage durant son transport. Pour éviter la perte de l'envoi, il est conseillé de choisir un transporteur qui propose un service de suivi des envois.

● LIMITATION DES GARANTIES TACITES

LA DURÉE DE TOUTES LES GARANTIES TACITES, Y COMPRIS LA GARANTIE D'ADAPTATION À L'UTILISATION ET LA GARANTIE DE QUALITÉ LOYALE ET MARCHANDE, EST LIMITÉE À CELLE DE LA GARANTIE EXPRESSE DÉTERMINÉE CI-DESSUS. PERSONNE N'EST AUTORISÉ À ENGAGER AUTREMENT LA RESPONSABILITÉ D'ALPINE EN VERTU DE LA VENTE D'UN PRODUIT.

● EXCLUSIONS DE LA GARANTIE

ALPINE STIPULE EXPRESSÉMENT QU'ELLE N'EST PAS RESPONSABLE DES DOMMAGES-INTÉRÊTS ET DOMMAGES INDIRECTS PROVOQUÉS PAR LE PRODUIT. LES DOMMAGES-INTÉRÊTS SONT LES FRAIS DE TRANSPORT DU PRODUIT VERS UN CENTRE DE SERVICE ALPINE, LA PERTE DE TEMPS DE L'ACHETEUR ORIGINAL, LA PERTE D'UTILISATION DU PRODUIT, LES BILLETS D'AUTOBUS, LA LOCATION DE VOITURES ET TOUS LES AUTRES FRAIS LIÉS À LA GARDE DU PRODUIT.
LES DOMMAGES INDIRECTS SONT LES FRAIS DE RÉPARATION OU DE REMPLACEMENT D'AUTRES BIENS ENDOMMAGÉS SUITE AU MAUVAIS FONCTIONNEMENT DU PRODUIT.
LES RECOURS PRÉVUS PAR LES PRÉSENTES EXCLUENT ET REMPLACENT TOUTE AUTRE FORME DE RECOURS.

● LIEN ENTRE LA GARANTIE ET LA LOI

La garantie vous donne des droits spécifiques, mais vous pouvez aussi jouir d'autres droits, qui varient d'un état ou d'une province à l'autre. En outre, certains états et certaines provinces interdisent de limiter la durée des garanties tacites ou d'exclure les dommages accessoires ou indirects. Dans ce cas, les limites et les exclusions de la garantie peuvent ne pas s'appliquer à vous.

● CLAUSE APPLICABLE AU CANADA SEULEMENT

Pour que la garantie soit valable, il faut qu'un centre d'installation autorisé ait installé le système audio pour l'auto dans votre véhicule et qu'il ait ensuite apposé son cachet sur la garantie.

● NUMÉROS D'APPEL DU SERVICE À LA CLIENTÈLE

Si vous avez besoin de nos services, veuillez appeler Alpine aux numéros ci-dessous pour le centre de service autorisé Alpine le plus proche.

AUDIO DE VOITURE	**1-800-ALPINE-1 (1-800-257-4631)**
NAVIGATION	**1-888-NAV-HELP (1-888-628-4357)**

Ou visitez notre site Web à l'adresse http://www.alpine-usa.com

ALPINE ÉLECTRONIQUE DE L'AMÉRIQUE, INC., 19145 Gramercy Place, Torrance, California 90501, U.S.A.
ALPINE ÉLECTRONIQUE DU CANADA, INC., 777 Supertest Road, Toronto, Ontario M3J 2M9, Canada
N'envoyez aucun produit à ces adresses.
Appelez notre numéro gratuit ou visitez notre site Web si vous recherchez un centre de service.

LIMITED WARRANTY

ALPINE ELECTRONICS OF AMERICA, INC. AND ALPINE OF CANADA INC. ("Alpine"), are dedicated to quality craftsmanship and are pleased to offer this Warranty. We suggest that you read it thoroughly. Should you have any questions, please contact your Dealer or contact Alpine at one of the telephone numbers listed below.

● PRODUCTS COVERED:

This Warranty covers Car Audio Products and Related Accessories ("the product"). Products purchased in the Canada are covered only in the Canada. Products purchased in the U.S.A. are covered only in the U.S.A.

● LENGTH OF WARRANTY:

This Warranty is in effect for one year from the date of the first consumer purchase.

● WHO IS COVERED:

This Warranty only covers the original purchaser of the product, who must reside in the United States, Puerto Rico or Canada.

● WHAT IS COVERED:

This Warranty covers defects in materials or workmanship (parts and labor) in the product.

● WHAT IS NOT COVERED:

This Warranty does not cover the following:

① Damage occurring during shipment of the product to Alpine for repair (claims must be presented to the carrier).
② Damage caused by accident or abuse, including burned voice coils caused by over-driving the speaker (amplifier level is turned up and driven into distortion or clipping). Speaker mechanical failure (e.g. punctures, tears or rips). Cracked or damaged LCD panels. Dropped or damaged hard drives.
③ Damage caused by negligence, misuse, improper operation or failure to follow instructions contained in the Owner's manual.
④ Damage caused by act of God, including without limitation, earthquake, fire, flood, storms or other acts of nature.
Any cost or expense related to the removal or reinstallation of the product.
⑤ Service performed by an unauthorized person, company or association.
⑥ Any product which has the serial number defaced, altered or removed.
⑦ Any product which has been adjusted, altered or modified without Alpine's consent.
⑧ Any product not distributed by Alpine within the United States, Puerto Rico or Canada.
⑨ Any product not purchased from an Authorized Alpine Dealer.

● HOW TO OBTAIN WARRANTY SERVICE:

① You are responsible for delivery of the product to an Authorized Alpine Service Center or Alpine for repair and for payment of any initial shipping charges. Alpine will, at its option, repair or replace the product with a new or reconditioned product without charge. If the repairs are covered by the warranty, and if the product was shipped to an Authorized Alpine Service Center or Alpine, Alpine will pay the return shipping charges.
② You should provide a detailed description of the problem(s) for which service is required.
③ You must supply proof of your purchase of the product.
④ You must package the product securely to avoid damage during shipment. To prevent lost packages it is recommended to use a carrier that provides a tracking service.

● HOW WE LIMIT IMPLIED WARRANTIES:

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR USE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE AND NO PERSON IS AUTHORIZED TO ASSUME FOR ALPINE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT.

● HOW WE EXCLUDE CERTAIN DAMAGES:

ALPINE EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. THE TERM "INCIDENTAL DAMAGES" REFERS TO EXPENSES OF TRANSPORTING THE PRODUCT TO THE ALPINE SERVICE CENTER, LOSS OF THE ORIGINAL PURCHASER'S TIME, LOSS OF THE USE OF THE PRODUCT, BUS FARES, CAR RENTALS OR OTHERS COSTS RELATING TO THE CARE AND CUSTODY OF THE PRODUCT. THE TERM "CONSEQUENTIAL DAMAGES" REFERS TO THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED WHEN THIS PRODUCT DOES NOT WORK PROPERLY. THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS.

● HOW STATE/PROVINCIAL LAW RELATES TO THE WARRANTY:

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province. In addition, some states/provinces do not allow limitations on how long an implied warranty lasts, and some do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, limitations as to these matters contained herein may not apply to you.

● IN CANADA ONLY:

This Warranty is not valid unless your Alpine car audio product has been installed in your vehicle by an Authorized Installation Center, and this warranty stamped upon installation by the installation center.

● HOW TO CONTACT CUSTOMER SERVICE:

Should the product require service, please call the following number for your nearest Authorized Alpine Service Center.

CAR AUDIO 1-800-ALPINE-1 (1-800-257-4631)
NAVIGATION1-888-NAV-HELP (1-888-628-4357)

Or visit our website at; http://www.alpine-usa.com

ALPINE ELECTRONICS OF AMERICA, INC., 19145 Gramercy Place, Torrance, California 90501, U.S.A.
ALPINE ELECTRONICS OF CANADA, INC., 777 Supertest Road, Toronto, Ontario M3J 2M9, Canada
Do not send products to these addresses.
Call the toll free telephone number or visit the website to locate a service center.